DÜBELKLEMME

gluing aid

DÜBELKLEMME 🕊

Tool-free for the DIY industry and with only 1 second pressing time for efficient mass production




from corpus thickness 16 mm

Corpus glueing:

- without cabinet clamp
- without screw clamp
- almost tool-free assembly
- saves time and energy
- ideal for self-assembly furniture industry

Functionality

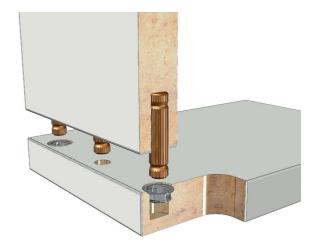

Cabinets are glued together without a cabinet press or clamps. Assembly is carried out as usual with wooden dowels, with an additional DÜBELKLEMME being used for every 2nd or 3rd dowel to bridge the curing time of the glue.

No clamps necessary!

